

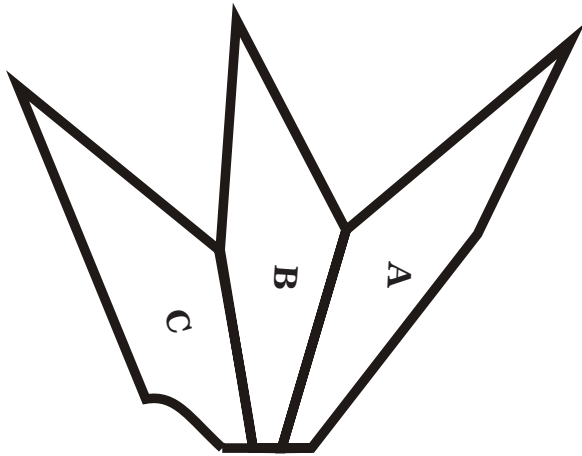
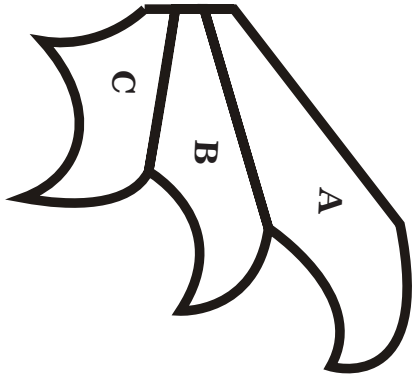


Avarian 8311-DR08

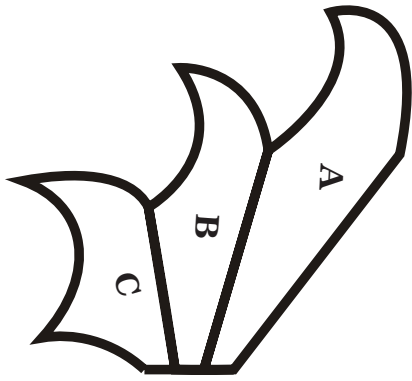

Alternate pattern

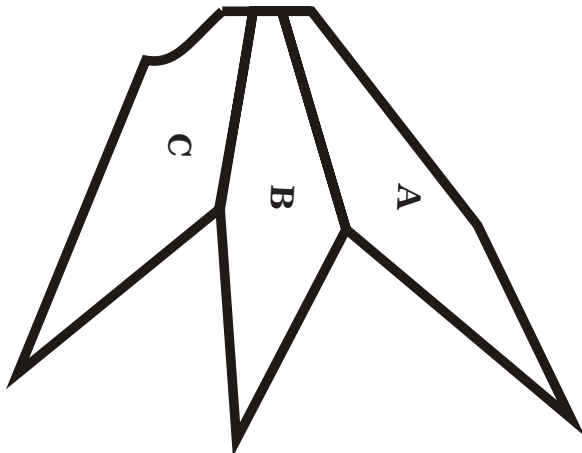

1. Clean flash and parting lines with a knife, file or sandpaper.
2. You can assemble your Monster Metals™ product one of three ways:
 - a. Solder with 60/40 solder
 - b. Use a glue-like “super glue” or an epoxy and simply glue the parts together.
 - c. You may use a combination of both A and B.
3. Assemble entire casting before you begin your glass work.
4. Paint or apply patina to your casting before you attach the glass. This will make handling easier.
5. Thoroughly clean down to the bare metal all areas where glass work will be soldered.
6. After glass has been attached, you may touch up solder joints, seams, and beads with paint or patina.

©2016 Monster Metals™

Monster Metals™ castings and patterns are protected by copyright laws worldwide and may not be reproduced without the explicit written permission of Monster Metals™, Inc.