



Monster Metals.com

3-D Fish 8311-FH01

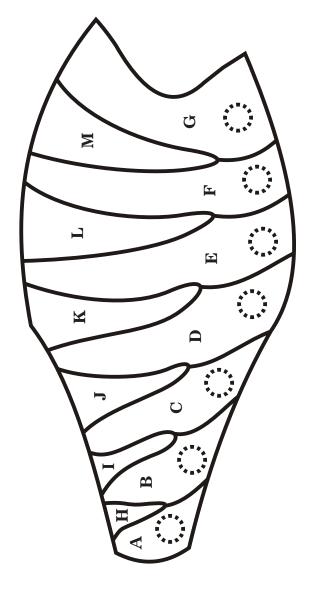

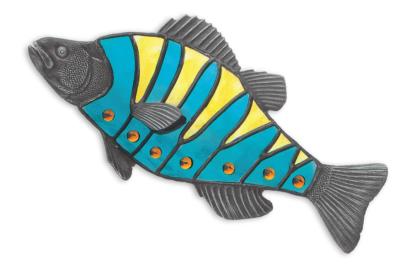

- 1. Clean flash and parting lines with a knife, file or sandpaper.
- 2. You can assemble your Monster Metals[™] product one of three ways:
 - a. Solder with 60/40 solder NOTE: Assemble your pieces with a cool iron. This metal has a melting point of 450°. A hot iron could result in melting of the product.
 - **b.** Use a glue-like "super glue" or an epoxy and simply glue the parts together.
 - **c.** You may use a combination of both A and B.
- **3.** Assemble entire casting before you begin your glass work.
- Paint or apply patina to your casting before you attach the glass. This will make handling easier.
- **5.** Thoroughly clean down to the bare metal all areas where glass work will be soldered.
- **6.** After glass has been attached, you may touch up solder joints, seams, and beads with paint or patina.



Optional jewel glued in place

©2016 Monster MetalsTM

Monster Metals[™] castings and patterns are protected by copyright laws worldwide and may not be reproduced without the explicit written permission of Monster Metals[™], Inc.